



ReplacementBrand



USER GUIDE - Model RB-CLEAR



USING THE CLEAR PITCHER FROM NEW

- 1) Carefully remove the clear pitcher from its packaging. Put the cartridge and clear pitcher lid to one side then wash the remaining parts in warm soapy water. Rinse with clean water, dry thoroughly and reassemble. Try to recycle any unwanted packaging.

2) Install the cartridge as follows:-



Remove the new cartridge from its bag



Shake the filter cartridge for around 10 seconds.



Place the cartridge into a container of cold tap water for 15 minutes. Then shake the filter once more to remove any air bubbles.



Remove cartridge holder from the clear pitcher. Clean the new cartridge and place it FIRMLY into the cartridge holder's slot so it seals. Then refit cartridge holder with the newly fitted cartridge back in the clear pitcher.



Pour cold tap water into the top section of your filter clear pitcher. Then let the water filter through.



Repeat stage 5 two more times, discarding the filtered water.

3) Reset LCD date counter in lid as follows:-

- Press and hold START button for around 5 seconds 00 will flash.
- Press START button again → DAYS 35 will be displayed.

4) Do not overfill the clear pitcher.

INTRODUCTION

Thank you for purchasing this product. ReplacementBrand products are designed and engineered by a team of specialists in the UK and China with extensive experience in producing high performance small water treatment products.

ReplacementBrand replaceable cartridges use high quality media to greatly reduce chlorine, heavy metals, dirt and hardness (that causes scum and scale). They are readily available at a competitive price and produce fresh natural tasting healthy drinking water.

IMPORTANT INFORMATION

- Store the clear pitcher in a cool dark environment (preferably a fridge). Do not leave in direct sunlight or a warm place as this could promote bacterial growth in some circumstances.
- Change the cartridge regularly. Cartridges should be changed every month and should NEVER be used longer than 60 days. The LCD display in the lid counts down from 35 days to help remind you to change the cartridge (press and hold START to reset the counter).
- Only use this product with water that is microbiologically safe according to national and international standards.
- Keep this product in a clean, hygienic environment – remember not to put it close to electrical products where spillage could result in an electric shock. Do not put lid in dishwasher.